



### PROFI B A T LASER BIKE ALIGNMENT TOOL

**Check a bike's chassis in 2 min.  
Applies to any type of motorcycle**

First the rear wheel is aligned with Profi CAT. Now the rim of the rear wheel is used as the base of the laser-controlled bike-alignment check-up.

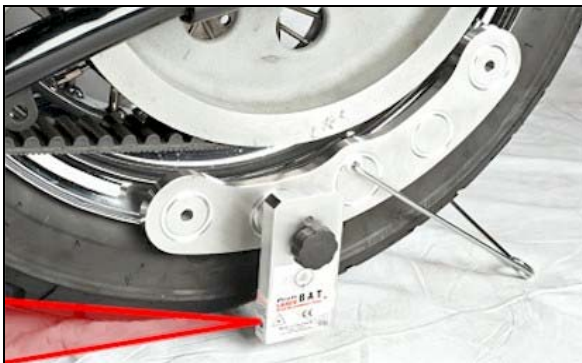

Since point of reference is the exactly aligned rim of the rear wheel, the measurement with Profi BAT is the most precise way to check a motorcycle's alignment. Even the use of much more complicated and expensive frame-measurement systems is less exact for the check-up of a motorcycle chassis and related components.

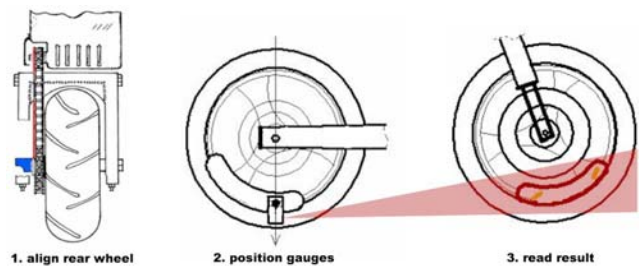

Simply clamp the spring-loaded gauges against the rims of the front and rear wheel. These measuring gauges are high-precision, CNC-machined parts. Mounted to the rear wheel gauges is a battery-operated laser-head on each side. The laser lines hit the indicators attached to the front wheel gauges.

Viewing the position of the two exactly defined laser-beams on the front-wheel indicators results in immediate and easily readable information for the operator. Irregular tolerances with chassis, swing-arm or front end can be determined within a few minutes.

The system is the perfect aid for

- used-bike evaluation and cost estimates
- quick checks before/after repairs
- customizing, transformation and bike-design
- Safety-checks as customer service



Profi BAT can be paid off already by a single hidden damage.



**It is not necessary to dismantle any parts from the bike, nor does the tool need any set-up time ... that is why Profi Laser BAT is unbeatably fast in use.**

Profi Laser BAT is delivered in a special storage case as a complete set, incl. Profi CAT and batteries. It applies to all motorcycles, additional parts are not needed.

The system is "Made in Germany" (Int. patent pending). It is available since Feb03 and proves its qualities daily in workshops, and insurance-offices, with racing teams and motorcycle manufacturers around the world.



#### Available versions:

- P-BAT -all motorcycles
- P-BAT S -sidecar builders
- P-BAT T -trike manufacturers
- P-BAT F -frame builders
- P-QAT -Quads + ATV's

Developed, DE-patented and „Made in Germany“ by